


CHILD LOCK

This microwave comes with child lock activated. In some cases, you may want the child lock feature disabled. For example, in households without young children or where there are physical limitations that can make the child lock difficult. PLEASE READ THE INSTRUCTIONS BELOW AS EVERY MICROWAVE IS SHIPPED WITH CHILD LOCK ENABLED.

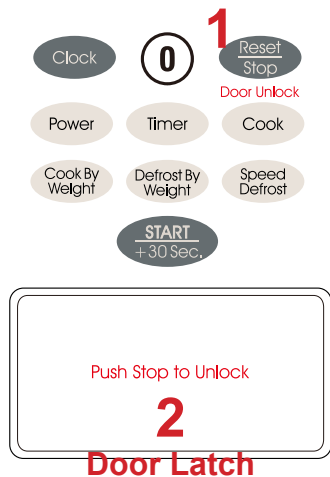

CHILD LOCK ACTIVE

The door will automatically lock **every time** a cooking cycle begins

- 1) Press **Reset/Stop** to stop the cooking cycle or to unlock the door once the cooking cycle has finished
- 2) Next, press the **Door Latch Release**

Note: Door will remain unlocked until next cooking cycle

HOW TO DISABLE CHILD LOCK

Unit will display ULoc when child lock is deactivated

- 1) With the door closed (and the unit plugged in), hold the **0** button for 2 seconds until you see Loc
- 2) Press **7**
- 3) Next press **9**, the display screen will show ULoc

After 1 second with system will return to standby mode and the safety lock will be disabled

