

Absocold® 0.9 Cu. Ft. 900 Watt Compact **Microwave Oven with Internal Power Allocator Technology**



AM090HWIPA



Black

Model: AM090HBIPA



White

Model: AM090HWIPA

PRODUCT SPECIFICATIONS

Internal Capacity 0.9 cu. ft. **Cooking Wattage**

Internal Power Allocator Prevents overloaded electrical system when microwave

and refrigerator are operating on the same circuit

Power Cord

Electronic Touch Pads with Child Control Lock Control Type

Power Levels 10 Power Level Selections **LED Display** Time, Power and Indicators

Potato, Popcorn, Pizza, Beverage, Frozen Dinner, Reheat **Auto Cook Selections**

Cook by Weight Beef, Mutton, Pork or Input Weight (max 5 lbs. 16 oz.)

Defrost by Weight Defrost up to 5 lbs. 16 oz. **Speed Defrost Defrost Based on Time** Kitchen Timer 99 minutes and 99 seconds

Express Cook 30 seconds on High

Easy Push-to-Open Button **Door Opening**

Turntable 10.63 in. Diameter Glass Turntable

DIMENSIONS

Width 19.02 in. Depth 14.14 in. Height 11.06 in. Weight 27.12 lbs. **Carton Width** 21.54 in. Carton Depth 16.14 in. Carton Height 13.27 in. **Shipping Weight** 29.76 lbs. **Shipping Cube** 2.67 cu. ft.

ELECTRICAL

The electrical requirements are a 120 V, 60 Hz, AC only, 20 A. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall outlet properly installed and grounded.


Power Consumption: 120 V | 60 Hz | 1350 W (microwave)

Absocold, P.O. Box 1545 Richmond, IN 47375 Toll-Free: 800-843-3714 Fax: 765-935-3450 www.absocold.com absocold@absocold.com

INSTALLATION REQUIREMENTS

- 1. Make sure that all the packing materials are removed from the inside of the door.
- 2. This microwave oven must be placed on a flat.
- 3. For correct operation, the oven must have sufficient air flow. Allow 20 cm of space above the oven, 10 cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet on which oven stands.
- 4. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
- 5. Make sure that the power cord is undamaged and does not run under the oven or over any hot or sharp surface.
- 6. The socket must be readily accessible so the microwave oven can be easily unplugged in an emergency.



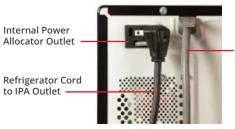

Microwave Cord to Wall Outlet