



# USE AND CARE GUIDE

REFRIGERATOR / FREEZER MODEL: ARD1033F\* - FROST-FREE

## READ THIS INFORMATION

It will tell you how to operate and care for your refrigerator.

It also offers tips on how to get the best performance.

### IMPORTANT WARNING

An empty refrigerator is a very dangerous attraction to children. Remove the gaskets, latches, lids or doors from unused appliances, or take some other action that will guarantee the appliance harmless.

**DANGER:** Risk of child entrapment. Before you throw away your old refrigerator:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb in
- Save these instructions

If you prefer ordering your own parts, use the enclosed list to find the part number. Do not use the illustration number.

For parts or service information, call Absocold: (800) 843-3714 or (765) 935-7501.

Record in the space provided below the serial number and model number of this appliance.

They are located on the serial plate affixed to the backside of the refrigerator or inside the refrigerator affixed to the inner liner surface.

Model # \_\_\_\_\_

Serial # \_\_\_\_\_

### ONE FULL YEAR WARRANTY

Absocold guarantees to the original purchaser that this appliance will be free from defects in material and workmanship for a period of one year from the date of purchase when this refrigerator is operated and maintained according to instructions attached to or furnished with this product.

### FIVE FULL YEAR WARRANTY ON HERMETIC COMPRESSOR UNIT

Absocold additionally guarantees, to the original purchaser only, the hermetic motor (compressor) furnished as a part of this refrigerator for a period of five (5) years from the date of purchase when this refrigerator is operated and maintained according to instructions attached to or furnished with this product.

During the above warranty periods, Absocold and its authorized dealers or its representatives retain the option to repair or replace the product, free of charge, if installation is within the fifty (50) states and the District of Columbia. If installation is outside the fifty (50) states, the cost of installation is borne by the purchaser, and Absocold's warranty obligations hereunder shall be limited to furnishing all replacement parts and materials, freight prepaid, to the continental United States port designated by the purchaser.

In an effort to properly administer its warranty policy, Absocold or its representatives may require a proof-of-purchase document before authorizing service or repair to the appliance under this warranty.

Warranty service information is available by simply contacting Absocold at 1 (800) 843-3714 or by contacting the dealer from whom you purchased this product.

It shall be the responsibility of the purchaser to deliver any compact refrigerator or freezer of less than 4.0 cubic feet in capacity to the nearest authorized service station, as designated by Absocold or its representatives, to obtain service under this warranty.

Except as provided herein, Absocold makes no other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose.

This warranty gives you specific rights, and you may also have other rights which vary from state to state.

# THINGS YOU OUGHT TO KNOW WHEN YOUR REFRIGERATOR IS INSTALLED

## INSPECT

Inspect for shipping damage. If unit is damaged or parts are missing, notify your Absocold dealer at once.

## INSTALLATION REQUIREMENTS

This refrigerator is intended to be used in household and similar applications such as hotels, military barracks, collegiate dormitories and other residential type environments. Remove all packing material and tape. Install on a level floor or well-supported counter. Avoid any direct sunlight, heat source, or moisture. This refrigerator is designed to be *freestanding* – that is, the appliance is to be installed at least 2” from the wall and the cabinet bottom is at least ¾” to 1” above the floor or carpet in order to let the air circulate freely around the refrigerator. Also allow at least 2” of space on the sides and 4” on the top surface as well for the best performance. If other appliance such as a microwave is placed on top, allow 4” of space above it.

## ELECTRICAL REQUIREMENTS

115 volts, 60 Hz, 15 amps.

## ELECTRICAL GROUNDING

Must be grounded. Uses 110-115 volts, 60 Hz.

Do not use extension cord. Use three-prong plug with three-prong grounded wall outlet.

Unless the above grounding method is followed, you are not protected against severe or lethal shock in the event of a short circuit of an electrical component or wiring of refrigerator.

In the event the power supply cord is damaged, it must be replaced by a service agent or a similarly qualified person to avoid a potential hazard.

## CAUTION

Should you unplug refrigerator, allow at least seven (7) minutes before restarting in order to allow the start relay to function properly

## USE AND CARE INFORMATION

### • TIPS ON EVERYDAY USE AND CARE

#### TO CONTROL TEMPERATURE:

1. Set the refrigerator and freezer temperature controls to COLDER. Wait 24 hours for the entire cabinet to cool, then adjust controls if needed.
2. Setting to COLD is warmest.
3. Ice cream is the best check of freezer temperature. When ice cream is too hard to serve, the freezer is colder than needed.
4. Set FRIDGE CONTROL to COLDEST only when rapid refrigeration is necessary.
5. Do not operate your refrigerator for more than 6 hours at a time with FRIDGE CONTROL set to COLDEST. At this setting, the compressor will run continuously. Consequently, food stored in the refrigerator compartment may be frozen.
6. Never turn COOL POWER to OFF unless both compartments are empty.
7. Any time you won't be using your refrigerator regularly, such as during vacation, empty and unplug it. Clean inside and block doors open.

**FOR ALL CLEANING:** Mix 2 tablespoons baking soda or mild soap with 1-quart warm water. No strong cleaners, scouring powder or pads should be used. Do not put the defrost tray in the dishwasher.

### • THINGS TO REMEMBER

1. Allow 24 hours for your refrigerator to reach a new temperature setting.
2. The motor will start and stop often. It must do so in order to maintain the temperature you select.
3. Keep your refrigerator reasonably level.
4. Unplug refrigerator before doing anything with its electrical system.
5. Do not damage the refrigerant circuit while using, handling, or moving your refrigerator or freezer to avoid either damaging the refrigerant tubing, or increasing the risk of a leak.
6. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

### • COOL POWER OFF:

When COOL POWER button is pressed for 3 seconds or more, OFF-LED light turns on, and refrigerator stops operation.

When COOL POWER button is pressed for 3 seconds or more again, OFF-LED light turns off, and refrigerator resumes operation.

If operation is stopped using COOL POWER button, allow at least 5 minutes before restarting in order to allow the start relay to function properly.

### • BEFORE CALLING FOR SERVICE

Check plug and outlet. Test outlet with LED light or another device. Be sure control is on. Read all Use & Care Information. Your questions may be answered. If not, find your model number (on upper back of refrigerator or inside the refrigerator affixed to the inner liner surface). Refer your model number and the problem to Absocold at (800) 843-3714 or (765) 935-7501. All service parts replacements must be done by a service agent or similarly qualified person to minimize the risk of possible ignition due to incorrect parts or improper service.

## DANGER—ELECTRICAL SHOCK HAZARD. Disconnect power before servicing.

### ENERGY SAVING TIPS - WAYS TO SAVE POWER, SAVE MONEY, AND STILL ENJOY YOUR REFRIGERATOR

- Reduce door openings
- Adjust temperature control to COLD setting when practical
- Close the door as soon as you can
- Keep your refrigerator away from stoves and other heat sources
- Don't put hot food in refrigerator

## WARNING!

- Your refrigerator should be connected directly to a grounded electrical wall outlet. No extension cords, multi-connection bars, etc. should be used.
- In case of prolonged power outage or an electrical disconnect of any type, please check your refrigerator for spoiled food.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.