
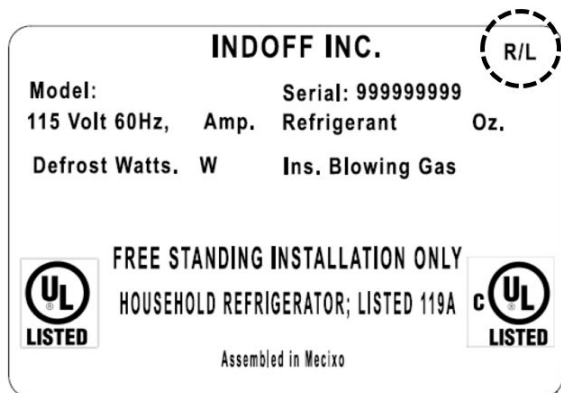


REVERSING THE DOOR SWING

Refer to the disassembly diagram and change the door hinges in the following procedure.

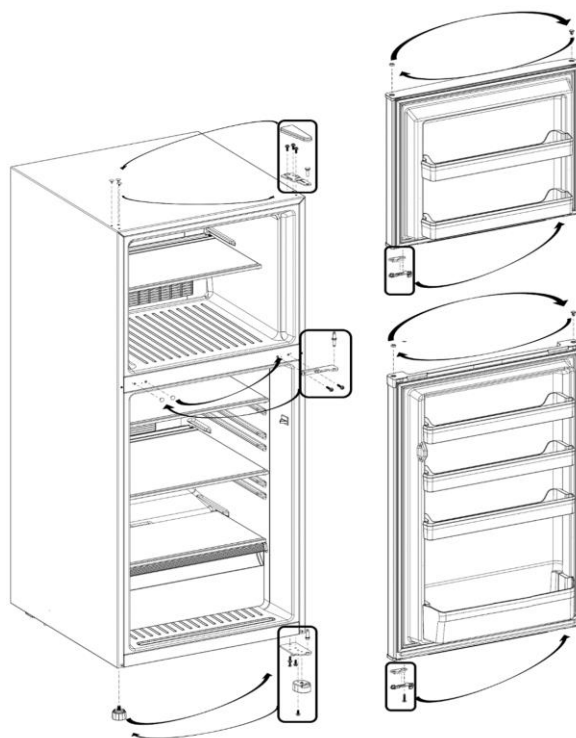

Confirm that the nameplate has a symbol “R/L” on the top-right corner.


Name Plate is located inside the refrigerator compartment.

Useful Tools:


- Phillips-head screwdriver
- Flat-head screwdriver
- 5mm & 8mm hexagonal socket wrench

REVERSING THE DOOR SWING


1. Carefully remove the top hinge cap.

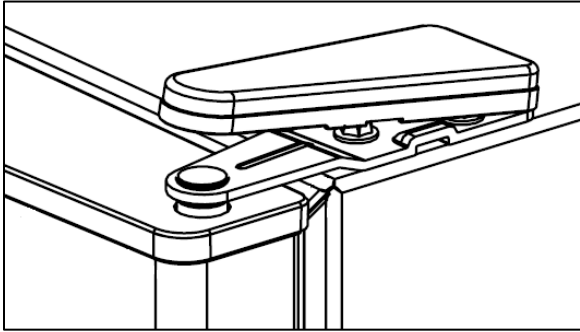



2. Remove screws (3pc), top hinge and washer. Freezer door can now be removed.

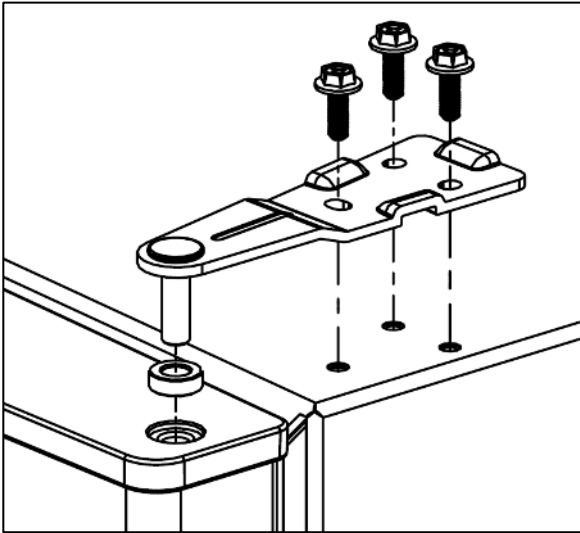



3. Remove hexagonal-head screws (2pc), center hinge, and washers (2pc). Refrigerator door can now be removed.

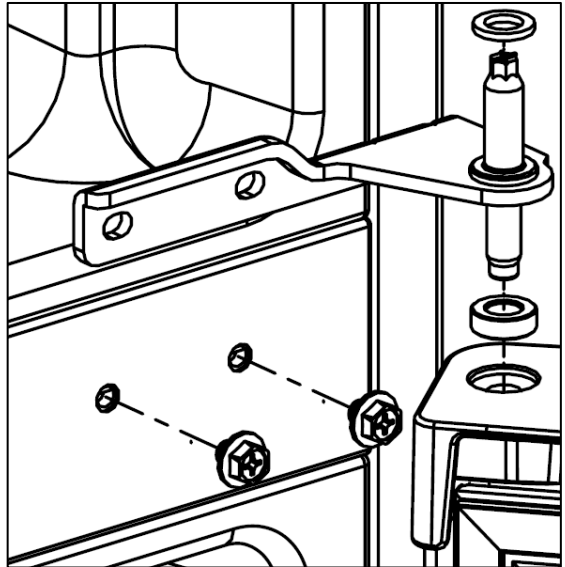


4. Remove hinge plugs (3pc on top, 2pc in center).

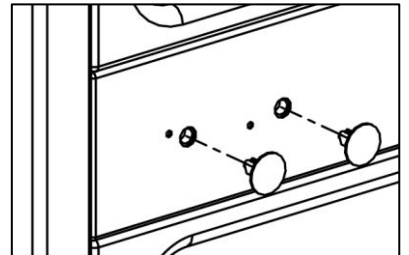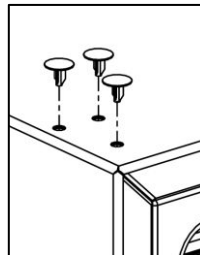


5. Remove screws (3pc) and bottom hinge on the bottom of the refrigerator. Unscrew the other leg.

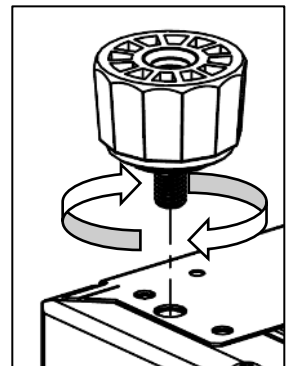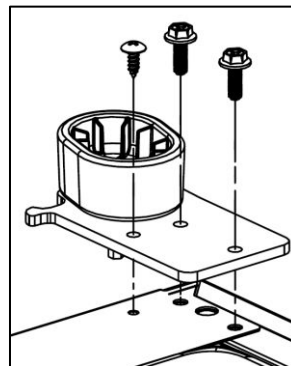


6. Remove the screw, bushing, and door stopper from the bottom of the freezer and the refrigerator doors.
Reassemble on the other side of the doors.

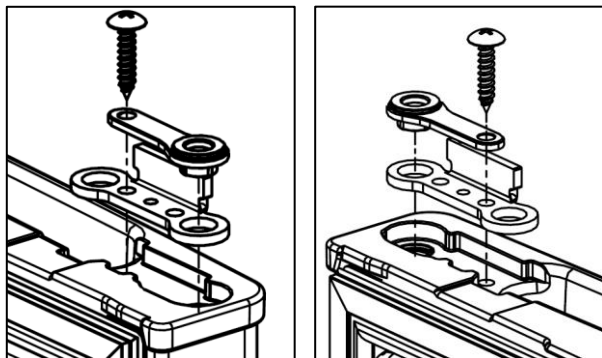


7. Remove hinge plug (1pc each) from the top of the doors and assemble on the other side.

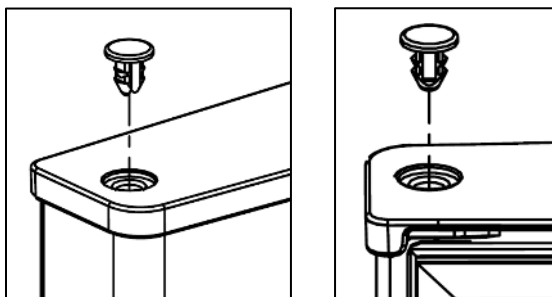


8. Disassemble the bottom hinge by unscrewing the hinge pin and removing the screw and leg. Flip the metal plate and reassemble.

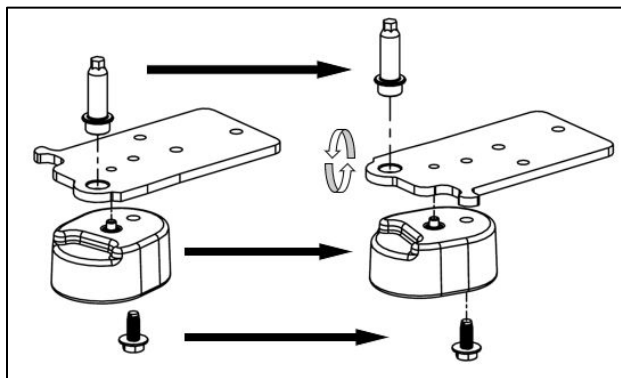


9. Unscrew the hinge pin from center hinge. Flip the hinge. Screw in the hinge pin.

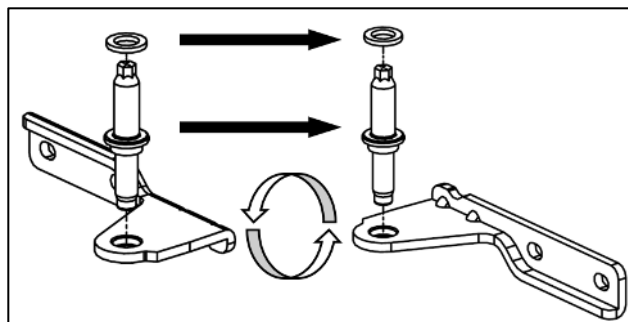


10. Reassemble bottom hinge with screws (3pc) on the bottom of the refrigerator. Screw in the other leg.

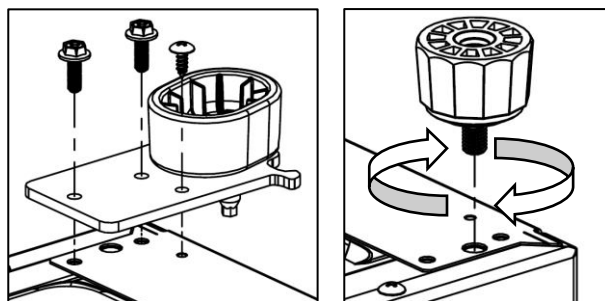


11. Insert the refrigerator door into the bottom hinge and reassemble the center hinge with screws (2pc).
Do not tighten screws completely at this point.

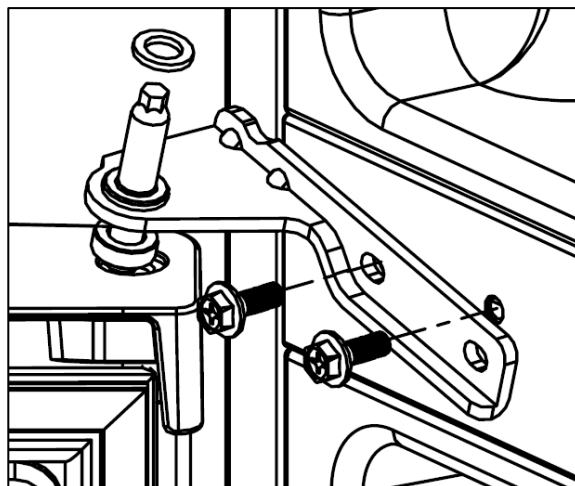

12. Insert the freezer door into the center hinge.
Reassemble the top hinge with screws (3pc).

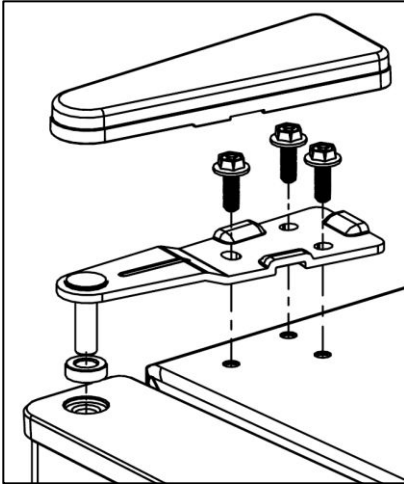

13. Close hinge holes on the top and in the center with hinge plugs.

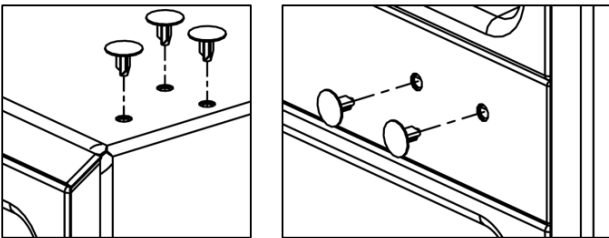

14. After ensuring the following, tighten all the screws holding the hinges:

- Both doors are straight.
- There is no space between the door gaskets and the refrigerator unit itself when the doors are closed.
- Gasket is not caught between the door and the cabinet on the hinged side when opening and closing the door.

The doors may slip out of position or there may be an opening between the doors and the cabinet if the screws are not tightened properly.